
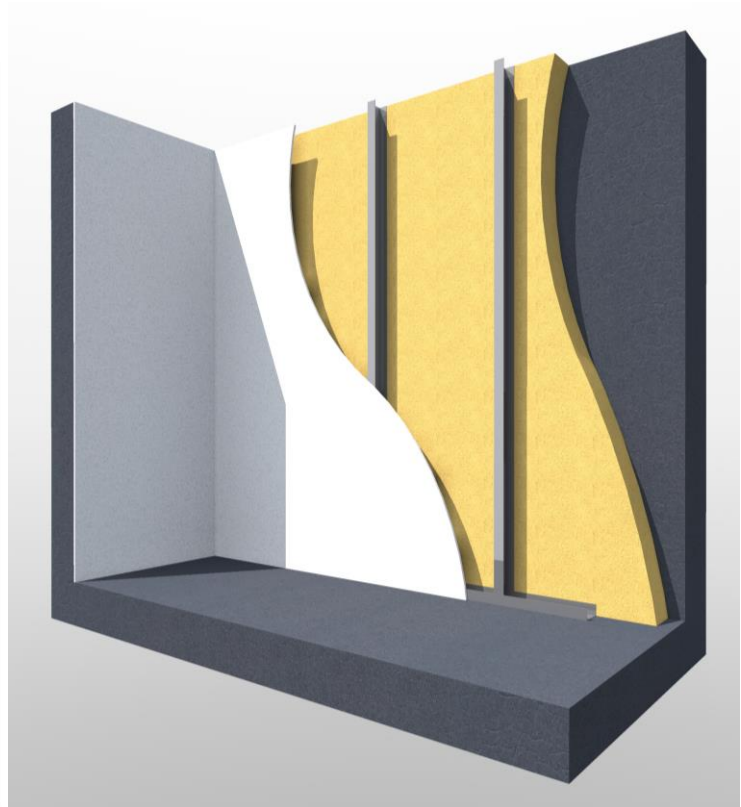


Spray polyurethane foam Purios

Example of spray polyurethane foam interior walls insulation.
Open cell and closed cell polyurethane foam application.

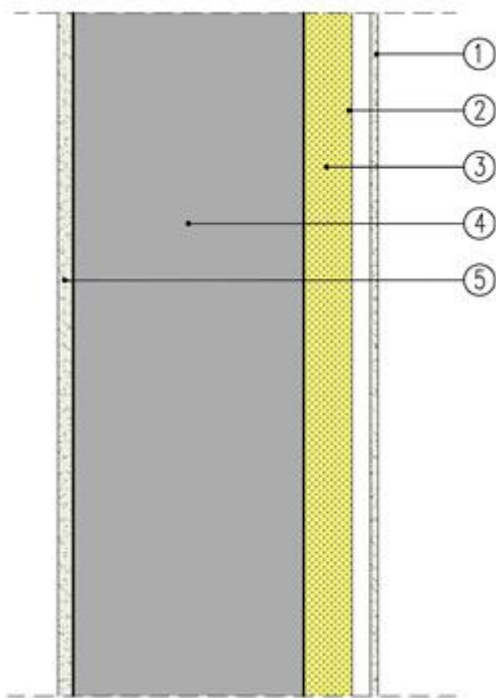

Description:

1. Plasterboard
2. Air gap or light steel frame
3. Thermal insulation – spray polyurethane foam Purios
4. Interior wall
5. Plaster

Before foam application clean and prepare the wall.
Add base coat (primer) if is needed to correct adhesive strength